

Installing The Classic Roman Shade or The Wide Pleat Roman Shade



Functional Art
Thermal Insulated Window Treatments
www.ArtwithanRvalue.com

Installing a Classic Roman Shade or Wide Pleat Roman Shade

These Shades are installed on a board which sits above your window trim. The board comes with the screw-eyes and hook-and-loop tape attached.



Hold up curtain to determine where it will sit above window.



Center board above window, level, and attach with screws to wall.

Installing a Classic Roman Shade or Wide Pleat Roman Shade

String cords from back of shade through screw-eyes, moving them all to the side of the window where the cord will be placed.



When all strings are threaded into the screw eyes, pull taught with curtain in place. Knot cords about 1" from last screw eye.

Installing a Classic Roman Shade or Wide Pleat Roman Shade

With curtain in place, put
magnetic strip onto the
back of curtain.
Check each direction for
strongest polarity.



Installing a Classic Roman Shade or Wide Pleat Roman Shade



Remove adhesive tape
from magnetic strip, and
apply to window trim



Secure with brads

Installing a Classic Roman Shade or Wide Pleat Roman Shade

Tap in to insure that they
are not protruding




Installing a Classic Roman Shade or Wide Pleat Roman Shade



Attach Rope Cleat at a comfortable height, inside of the window. Hand tighten with screwdriver.

Installing a Classic Roman Shade or Wide Pleat Roman Shade

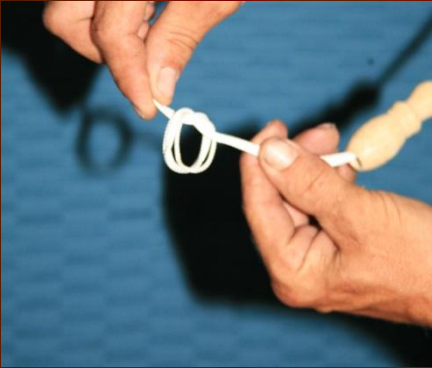

Place handle on end of cord, at a comfortable height. If desired, the cords can be braided for added safety. Securely knot all cords, and then trim excess cord.

Installing a Classic Roman Shade or Wide Pleat Roman Shade



Insert Metal Weight Bar

Installing a Classic Roman Shade or Wide Pleat Roman Shade



Test Curtain

Functional Art

Thermal Insulated Window Treatments



www.ArtwithanRvalue.com

413-354-2320